

Rechargeable Digital Camera Batteries

Duracell Part #	Duracell mAh	Description	Fits Models	Replaces OEM Part #
DR9568	850	3.7 Volt Li-Ion Digital Camera Battery	Canon PowerShot S100, S200, S230, S400, S410, S500	NB-1I
DR9570	750	7.2 Volt Li-Ion Digital Camera Battery	Nikon CoolPix 775, 995, 4300, 4800, 5700, 8700	EN-EL1
DR9576	2100	2.4 Volt NiMH Digital Camera Battery	Kodak Easyshare C300, CX4200, CX4300, CX6000, DX6300	KAA2HR
DR9581	650	7.4 Volt Li-Ion Digital Camera Battery	Canon Elura 85, 90, Optura 40, 400, 500, ZR-700, ZR-800, ZR-830	NB-2L, NB-2LH
DR9611	700	3.7 Volt Li-Ion Digital Camera Battery	Casio Exilim EX-S20, S600, M20, Z3, Z75	NP-20
DR9613	1050	3.7 Volt Li-Ion Digital Camera Battery	Olympus Camedia C-5000, C7000, Stylus 300, 400, 410, 800, 810	LI-10B
DR9615	1400	7.4 Volt Li-Ion Digital Camera Battery	Nikon D50, D70	EN-EL3, EN-EL3a
DR9618	650	3.7 Volt Li-Ion Digital Camera Battery	Fuji Finepix, Pentax Optio, Sanyo VPC-E1090	NP-40
DR9624	750	3.7 Volt Li-Ion Digital Camera Battery	Canon PowerShot SD20, SD100, SD110, SD500, SD550	NB-3L
DR9662	720	3.7 Volt Li-Ion Digital Camera Battery	Nikon CoolPix P1, S1, S2, S5, S7c, S50, S51	EN-EL8
DR9664	630	3.7 Volt Li-Ion Digital Camera Battery	Olympus Camedia D630, Stylus 700, 710, 720SW, 750, 770SW	LI-40B, LI-42B
DR9668	700	7.2 Volt Li-Ion Digital Camera Battery	Panasonic Lumix DMC-FZ7, FZ18, FZ30	CGR-S006A/1B
DR9670	1400	7.4 Volt Li-Ion Digital Camera Battery	Nikon D70s, D80, D90, D100, D200, D300, D700	EN-EL3e
DR9673	1050	7.4 Volt Li-Ion Digital Camera Battery	Nikon D40, D40x, D60	EN-EL9
DR9678	650	3.7 Volt Li-Ion Digital Camera Battery	Sony CyberShot DSC-T2, -T70, -T200, -T300	NP-BD1, NP-FD1
DR9705	780	3.7 Volt Li-Ion Digital Camera Battery	Canon PowerShot SD790, SD800, SD850, SD880(is)	NB-5L
DR9709	1000	3.7 Volt Li-Ion Digital Camera Battery	Panasonic Lumix FX01, X8, FX9, LX1	CGA-S005
DR9712	720	3.7 Volt Li-Ion Digital Camera Battery	Kodak Easyshare M753, M853, M893, V550, V610, V705	KLIC-7001
DR9714	850	3.7 Volt Li-Ion Digital Camera Battery	Sony CyberShot DSC-H10, H50, N1, T20, W100, W200	NP-FG1, NP-BG1
DRC4L	720	3.7 Volt Li-Ion Digital Camera Battery	Canon PowerShot SD300, SD400, SD430, SD450	NB-4L
DRF60RES	1100	3.7 Volt Li-Ion Digital Camera Battery	Kodak Easyshare LS420, P712, Z760 Aiptek A-HD, A-HD+	KLIC-5000, NP-60

Rechargeable NiMH AA / AAA Batteries

Part #	Description
DC1500B4N	DURACELL® AA 2650mAh NiMH Rechargeable Batteries, 4 pack
B-162	Hi-Capacity™ AA 2300mAh NiMH Rechargeable Batteries, 4 pack
DC2400B4N	DURACELL® AAA 1000mAh NiMH Rechargeable Batteries, 4 pack

Rechargeable Digital Camera Battery Chargers

Duracell Part #	Description	Fits Models
DRCHDIGT	DURACELL® Universal Digital Camera Battery Charger	Canon, Fuji, Kodak, Konica Minolta, Nikon, Olympus, Panasonic, Sony
DRCHDIG1	DURACELL® Digital Camera Battery Charger with one plate	Canon, Panasonic, Sony
DRCHDIG2	DURACELL® Digital Camera Battery Charger with one plate	Canon, Fuji, Nikon, Olympus
DRCHDIG3	DURACELL® Digital Camera Battery Charger with one plate	Canon, Nikon
DRCHDIG4	DURACELL® Digital Camera Battery Charger with one plate	Casio, Konica Minolta, Panasonic
DRCHDIG5	DURACELL® Digital Camera Battery Charger with one plate	Fuji, Nikon
DRCHDIG6	DURACELL® Digital Camera Battery Charger with one plate	Kodak